

AB-1 Edit Suite Factory Reset

To factory reset the AB-1. NOTE: this will completely reset all parameters to default and erase the EDL.

1. If you haven't written down the configurations for the sources and recorder, do so now.
2. Pull the power plug from the back of the unit.
3. Hold down the SHIFT + ALL STOP buttons.
4. While the buttons are held down, plug in the power.
5. Hold the buttons down until you see the words "NVRAM INIT" in the LCD display.
6. Release the buttons.
7. Re-enter the VCR configurations.

Why must I perform the Factory Reset?

The NVRAM is susceptible to power spikes and fluctuations. Even to spikes in the video and audio signal lines caused by incorrect voltages or static electricity discharge (very rare).

If you have to perform a Factory Reset, it is wise to examine the cause. Some do's and don'ts:

- If the unit is plugged into a power strip, never apply or remove power from the unit using the switch on the power strip.
- Never remove power to the unit without first pressing the "Power" key on the keyboard or front panel
- If the power in your area is unstable or your lights dim and grow brighter on occasion, it is wise to invest in a power conditioner or UPS (Uninterruptible Power Supply).