



superior video technology

CORPORATE

SALES

PRODUCTS

SUPPORT

Downloads

FAQs

Manuals

Warranty Info

Contact Support

## INVIDEO PCI CAPTURE

### Problem

### Possible Causes/Solutions

What operating systems does the InVideo PCI Card work with?

The InVideo PCI Card is only Windows 95 & 98 Compatible. There aren't any drivers available for Windows 3.1 or Windows NT.

Where does the InVideo PCI Card go in my computer?

The InVideo PCI Card, goes into an available PCI Slot inside your computer.

How Do I Make sure that I have the Latest Drivers for my InVideo PCI Device?

Right-Click on My Computer, go to properties, go to the device manager, click on the + next to Sound & Video Game Controller, Double Click on BT878 Fusion Capture Device Video Section , Go to the Driver Tab and check the driver date. The latest drivers are dated : 12-14-1999

I have installed the drivers for the InVideo PCI Card but in the device manager I get a yellow exclamation point in front on the BT878 Video Capture Device, what did I do wrong?

Click on the Device that has an exclamation point in front of it , and click on the Remove button at the bottom of the screen. Look if there is any device called PCI Multimedia Device under Other Devices, If so, remove it. Restart your computer, when you get back into Windows the "New Hardware found" message should come back on, and Windows will try to reinstall the drivers for the INVIDEO PCI device. If you still get the yellow exclamation point, check for possible IRQ conflicts between the InVideo PCI Card and some other Devices on your computer.

The drivers for the InVideo PCI Card seem to have been installed properly, now what do I do?

If you have run the setup from the InVideo System Software CD ROM, go to Start, Programs, Computer Eyes, and run the Cinemaker Program. This program is a very simple program that allows basic Video Capture. If you want more advanced features, please install the MGI Video Wave Software that can be found on the InVideo System Software CD ROM.

When I Open Cinemaker, I get the message "Capture Device not detected".

Go to Options and make sure that there is a check mark in front of the MS VIDEO BROOKTREE VIDEO CAPTURE DEVICE. If not put a check mark in front of it. If there is already a check mark in front of it, look for some possible IRQ conflict between the InVideo PCI Card and some other devices on your computer.

The Cinemaker program opens without any error message, but all I get is a solid black screen.

First, check your Video Source, it is either going to be a Composite Video Source or an S-Video Video Source. Once you have determined which Video source you are using, make sure that you are going from the Video out of your Video Source into the Video In or SVHS in of the InVideo PCI, make sure that your Video source is turned on, go to Options, Video Source, and select the Proper Video Source Composite, Tuner or S-Video. Once you make the proper selection you should see a live preview of the image coming from your Video Source. If you do not, go to Capture, and make sure that either Overlay Mode or Preview is selected.

How can I get a Full screen Live preview of the Image?

The InVideo PCI Card is limited to a resolution of 640x480 for preview and 320x240 for Video Capture. You can select those Preview Sizes by going to Options and Video Format.

When I capture Video I drop a lot of frames, what could be wrong?

Make sure that the Composite or S-video cable that you are using is not damaged.

Change the audio capture settings.

Make sure that you are using the latest InVideo PCI Drivers.

Having a lot of application programs opened can affect the Capture performance of the InVideo PCI Card.

Try to change the Video format of the InVideo PCI Device (Reduce the capture resolution, colors).

How can I capture sound with the InVideo PCI Card?

The InVideo PCI Card is a Video Device, it does not have any audio inputs and does not process any sound. However the Software takes care of capturing the Sound. In order to do that, make sure you have connected the audio output of your video source to the audio input of the sound card (Line In). Make sure that the Line-In input on the sound card mixer is not muted.

I cannot capture MPEG files using Cinemaker, what am I doing wrong?

The InVideo PCI does not perform Hardware MPEG Compression. The MGI Video Wave software will take an AVI file and convert it to an MPEG format.

[Terms of Use](#) | [Privacy Policy](#) | [Contact Focus](#)

© Copyright 2005 Focus, Inc.  
All rights reserved.