


MR-HD100 Cage Mount Instructions for JVC GY-HD Series Camcorders


These instructions describe mounting the Focus MR-HD100 Cage Mount to JVC GY-HD series camcorders. These instructions assume an Anton/Bauer Gold Mount plate with Universal BP (GY-HD200/250) or QR-JVC714HDV (GY-HD100 series) are mounted to the camera. Additionally, the Anton/Bauer ABWM-KIT accessory mount is required.

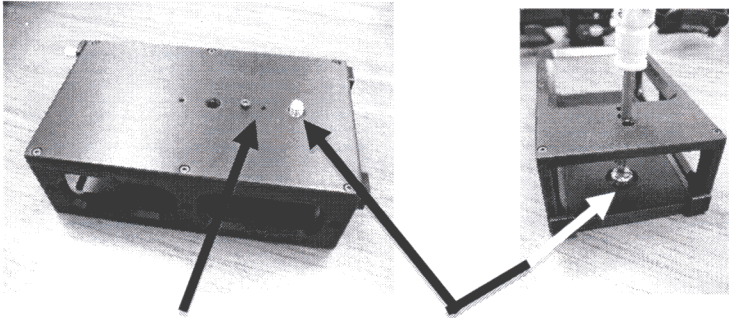


Allen socket-head screw

Remove Captive Screw

1. Using a flat-head screwdriver, completely remove the captive screw from the 1/4"-20 threaded hole on the bottom of the MR-HD100 cage.
2. Ensure that the 2.5mm allen socket-head screw is located in the same position as the picture above. If it is not, reposition using a 2.0mm allen wrench.

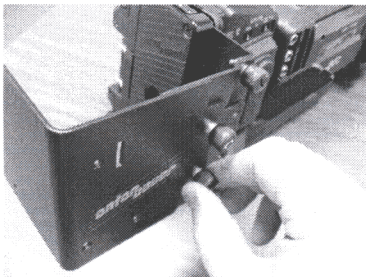


3. Remove the ABWM-KIT plate from the gold mount bracket.

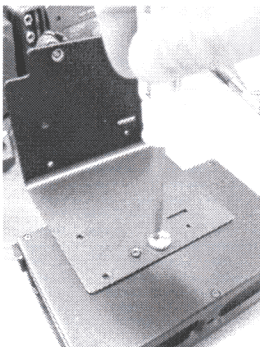

4. Place the ABWM-KIT plate on the back of the MR-HD100 cage. Insert the screw removed in step 1 into the threaded hole on the cage and tighten. The allen socket-head screw should


center into the empty hole on the ABWM-KIT plate. The plate should mount flush to the back of the cage.

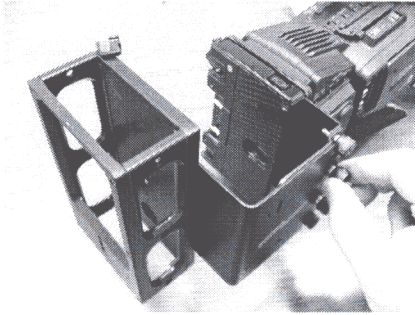

5. Remount the ABWM-KIT to the Anton/Bauer Gold Mount plate.



6. Insert MR-HD100 into the cage mount. Once fully inserted, the top panel of MR-HD100 should be flush with the top of the cage.

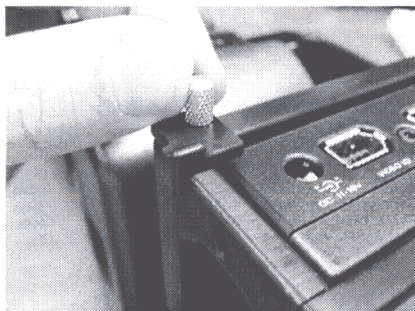

7. At the top corner of the cage, loosen the thumb-screw to allow the lock to pivot. Slide the pivot over the MR-HD100 and tighten.