

**FS-CV Mount Instructions for the Canon XL-H1 and H1S.**


These instructions detail mounting the FS-CV DTE recorder to a Canon XL-H1 or H1S camera using the optional Focus Enhancements' Cage Cradle (ASYF-1349-01LF) or Cam Handle Cradle (ASYF-1350-01LF).

**ASYF-1350-01LF Cam Handle Cradle Mount**

Remove mount from packaging and using the supplied hex (allen) key, remove the two hex screws to separate the "U" mount from the cradle.



Apply the supplied adhesive rubber strips to the back-side of the cradle on either side of the three center openings.

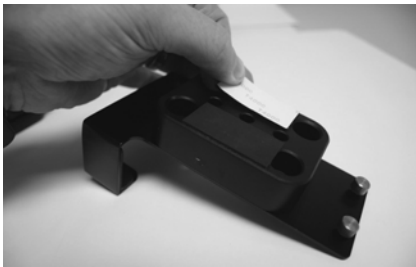

Place the supplied mount plate in the large opening on the XL-H1/H1S accessory plate. Insert this piece from the rear of the camera accessory plate




Remove all protruding mounts from the camera accessory mount so that the Cam Handle Cradle mounts flush to the plate. Using the supplied screw and nut, insert screw into one of the three counter-sunk openings and pass through the supplied mount plate hole. Attach nut to screw and tighten.



Insert FS-CV into the cradle securing the unit using the thumb-screws at the rear of the cradle.

## ASYF-1349-01LF Cage Cradle Mount

Place the supplied mount plate in the large opening on the XL-H1/H1S accessory plate. Insert this piece from the rear of the camera accessory plate

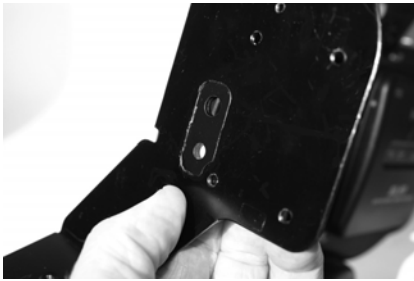

Remove all protruding mounts from the camera accessory mount so that the Cage Cradle mounts flush to the plate. Locate the guide pin on the rear of the Cage Cradle and align it with the lower hole on the supplied mount plate. Using the supplied  $\frac{1}{4}$ " – 20 x  $\frac{3}{8}$  screw, attach the Cage Cradle to the supplied mount plate (from the rear).

